



Cindy's Jumpers Churro Machine Rental Operating Instructions

INSTALLATION

1. Place the unit in a prominent location on a level counter, where the churros will attract attention.
2. Precaution should be taken so customers do not come in contact with the hot unit.
3. Plug the power cord into a suitable (20 amp) 120 volt outlet that can provide the required wattage. Having other appliances on a circuit, may prevent your unit from receiving the necessary voltage.

NOTE:

It is very important to make sure that the machine is in the OFF position before you connect it to any outlet. Do not remove the crumb tray until you turn the machine OFF.

GENERAL OPERATING PROCEDURES

1. Fill the machine up with pre-cooked frozen churros. The machine has a heating element in the bottom and a heat lamp on top. The lower level will cook the churros and the top lever will keep the churros warm.

NOTE:

You must turn the timer ON for the heating element to turn ON.

2. Once all the churros are cooked you may leave them inside the machine with the heating lamp ON for them to stay warm until they are ready to serve.
3. You may keep turning the timer ON as many times as required to fully cook all the churros.
4. To serve just dip them in sugar and cinnamon mix.

COOKING

Cooking time will depend on the amount of product and frozen temperature of the churros.

CLEANING

No Cleaning is required just empty out excess churros.